

CREATE
YOUR STYLE with
CRYSTALLIZED™
– Swarovski Elements

MAKE YOUR CREATIVITY STICK

BOX PLEASURES



BOX PLEASURES



CRYSTALLIZED™ – Swarovski Elements

Supplies & Tools


Article	Product Group	Article No.	Amount	Size	Colour	Colour Code
	Flat Backs No Hotfix	2483	4 pcs.	10 mm	Crystal Dorado	001 DOR
	Flat Backs No Hotfix	2483	4 pcs.	10 mm	Topaz	203
	Beads	5000	1 pc.	4 mm	Crystal Dorado 2x	
	Beads	5040	2 pcs.	6 mm	Topaz	203
	Beads	5040	3 pcs.	8 mm	Topaz	203
	Beads	5328	8 pcs.	3 mm	Topaz	203
	Beads	5328	12 pcs.	4 mm	Crystal Dorado 2x	
	Crystal-it	75011	60 pcs.	2 mm	Crystal Dorado	001 DOR
	Crystal-it	75011	228 pcs.	2 mm	Topaz	203
	Crystal-it	75011	84 pcs.	3 mm	Crystal Dorado	001 DOR

Supplies


Brass wire, brass, 0.3 mm, 60 cm
Cardboard, dark brown, 20x20 cm

Level of Design: **ADVANCED**
Have a look at the **text instruction** at the last page!


STEP 1

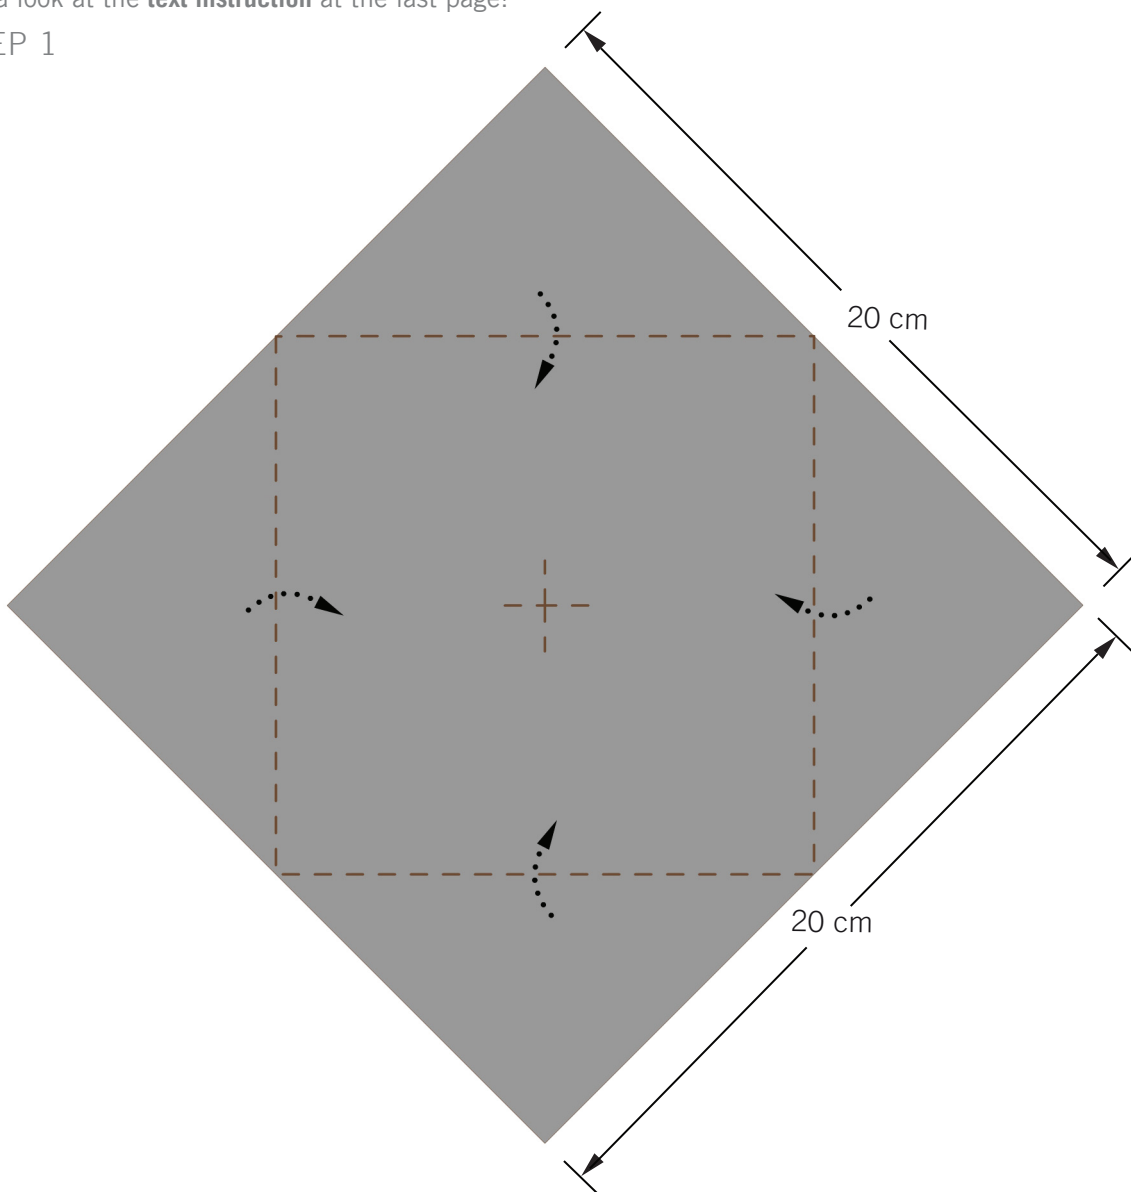


STEP 2

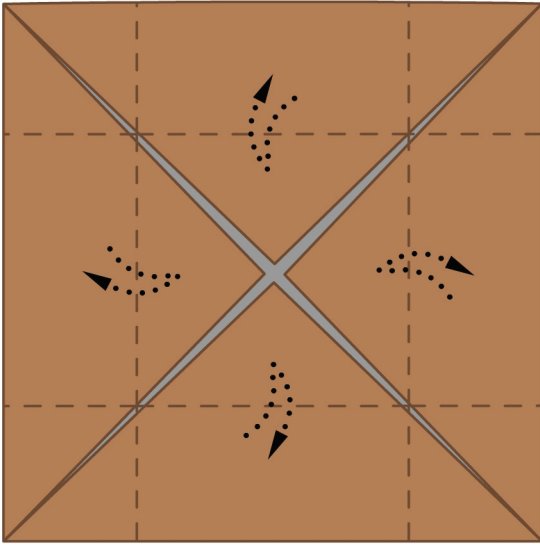


STEP 3

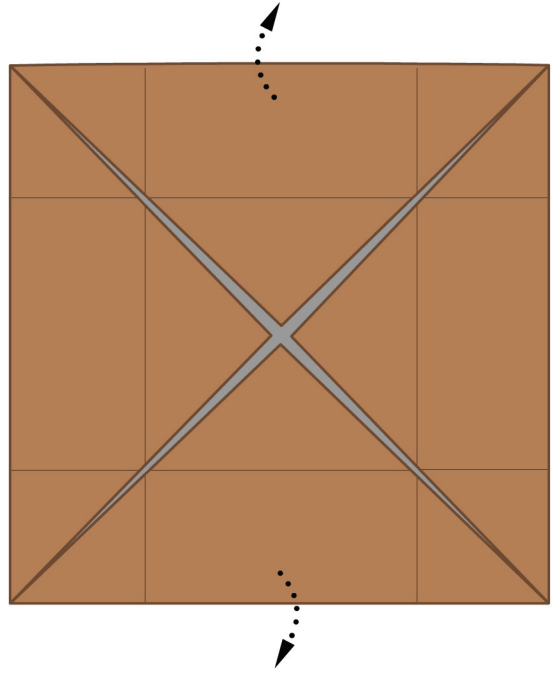

STEP 4

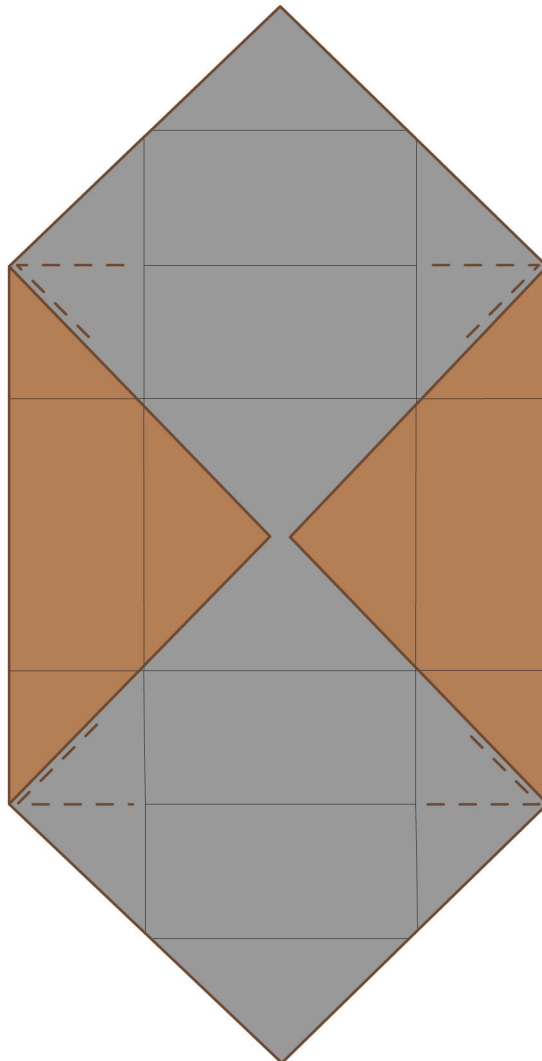


STEP 5


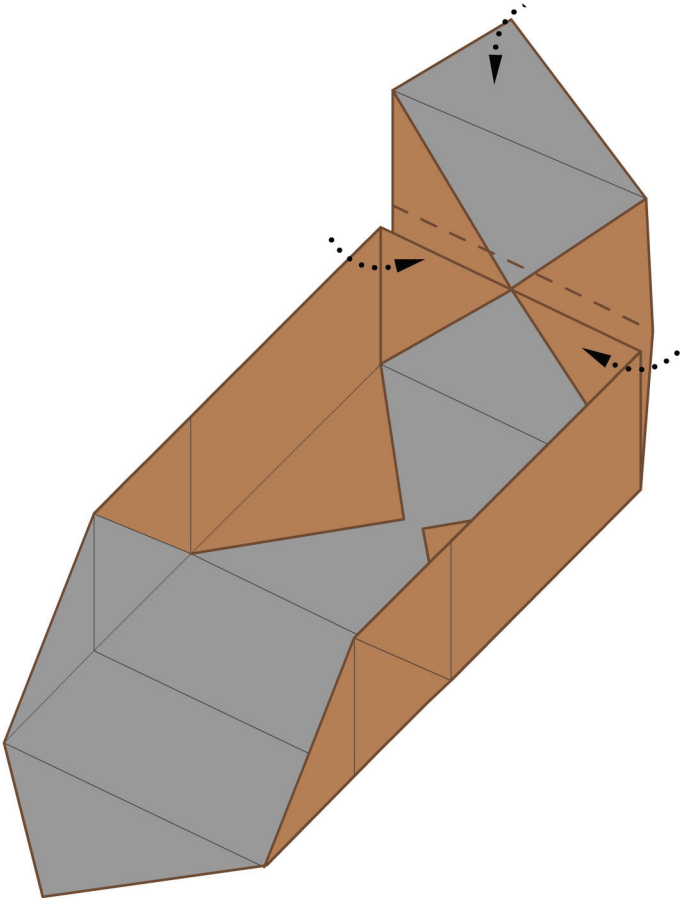


STEP 6


Repeat Step 5:

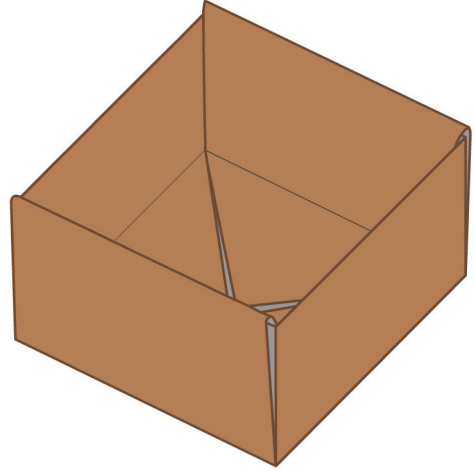


STEP 7

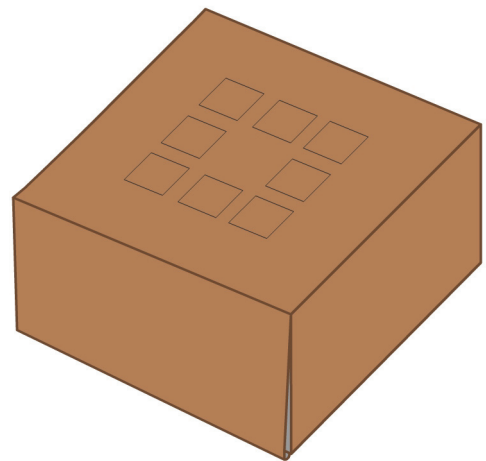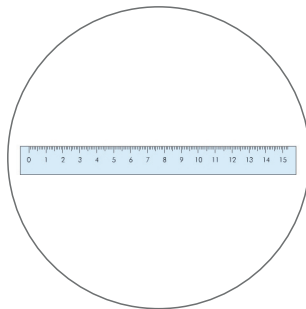



STEP 8

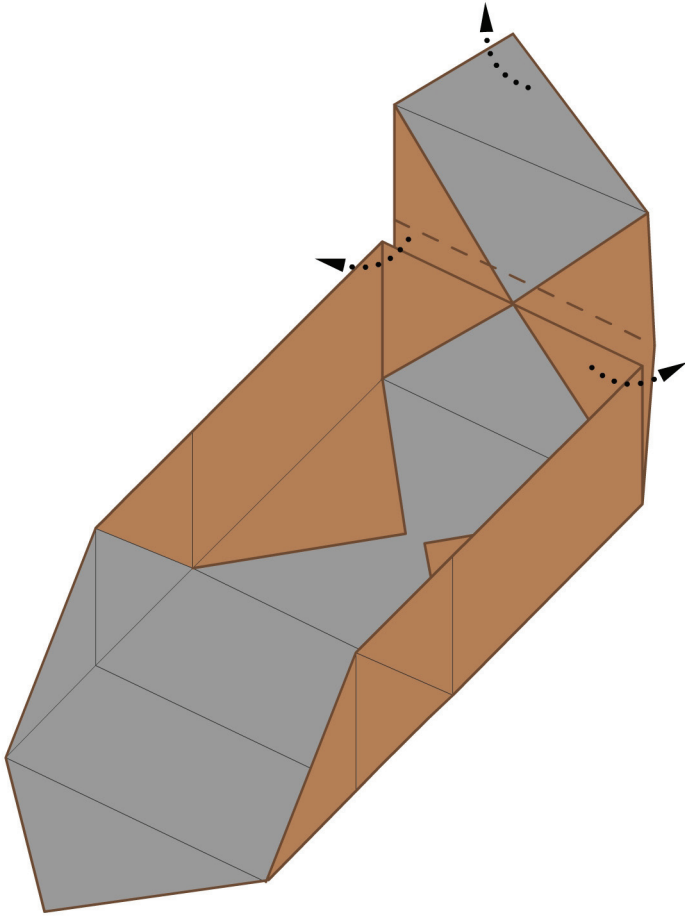



STEP 9

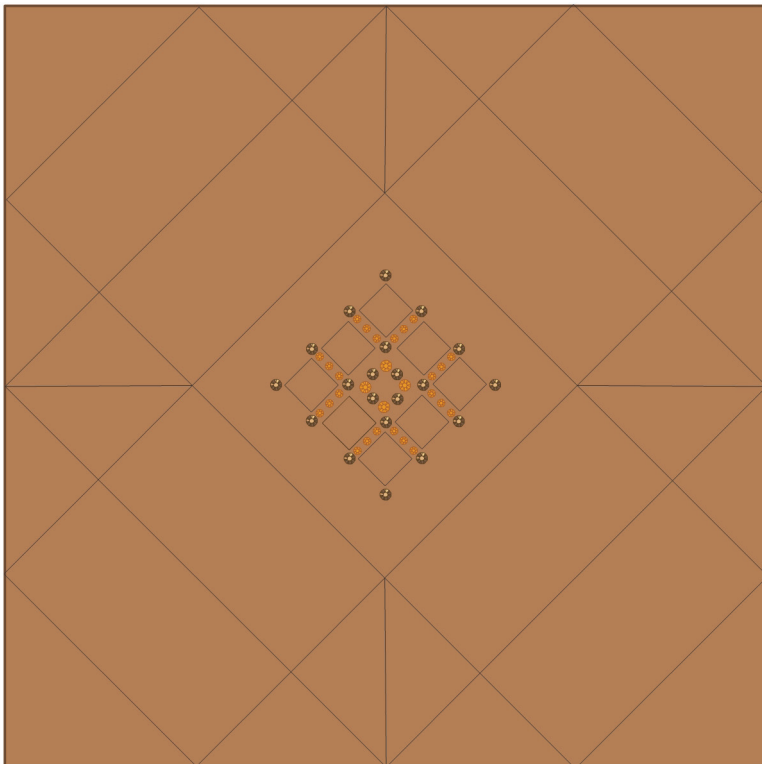


STEP 10

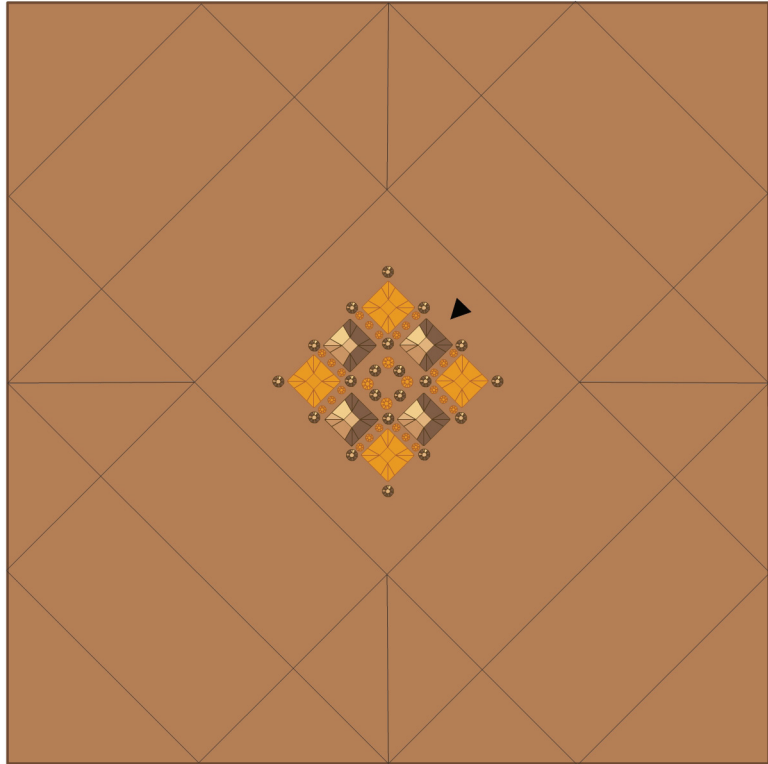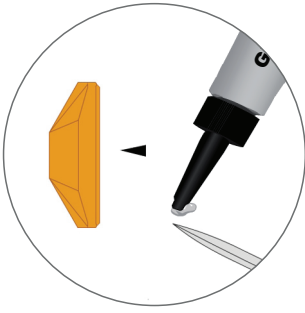


STEP 11

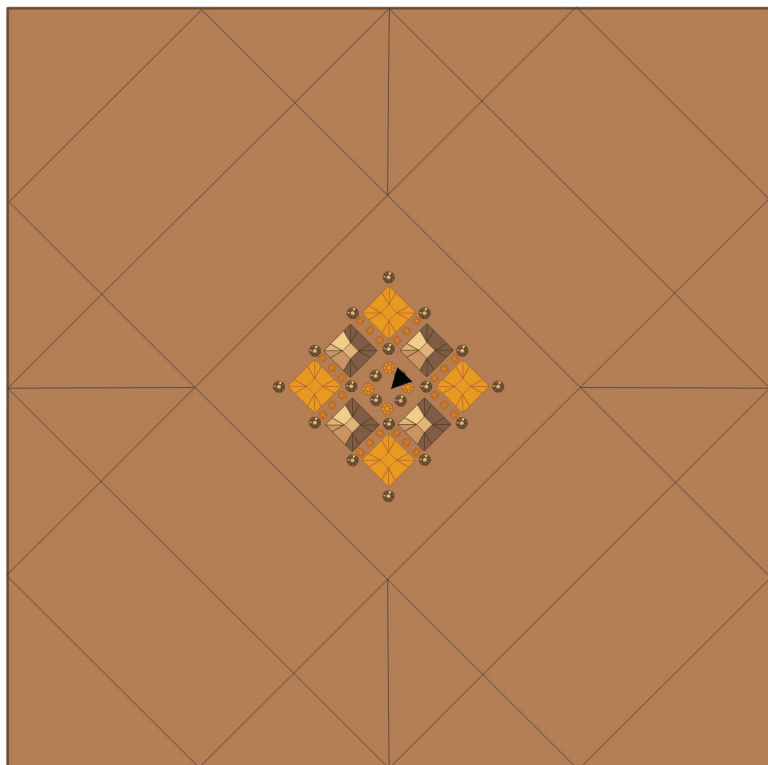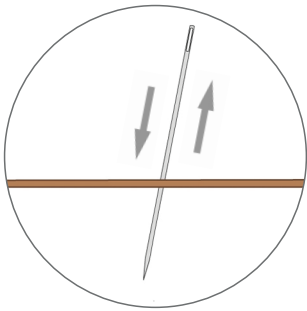


STEP 12

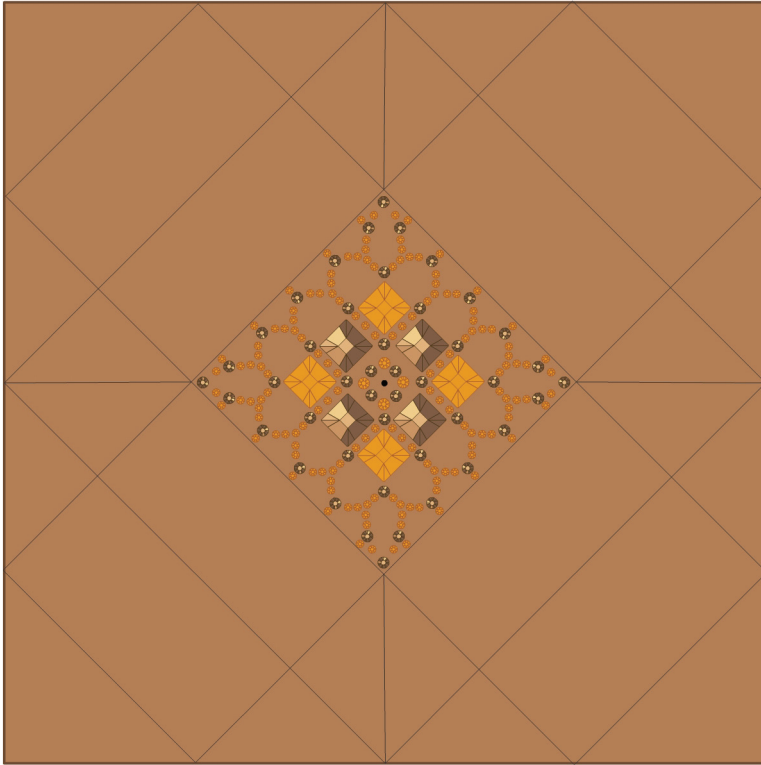


STEP 13

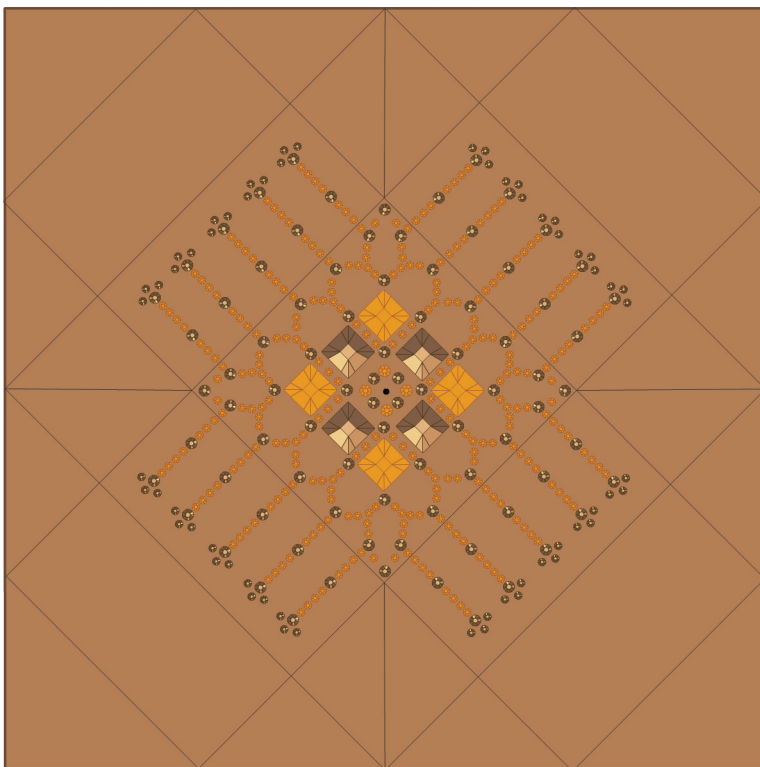


STEP 14

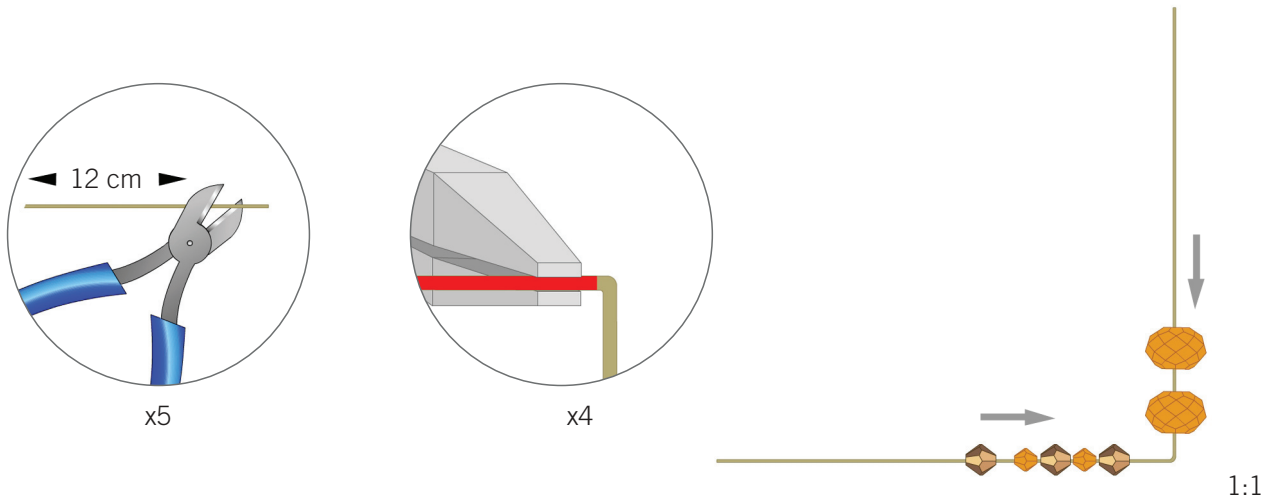


STEP 15

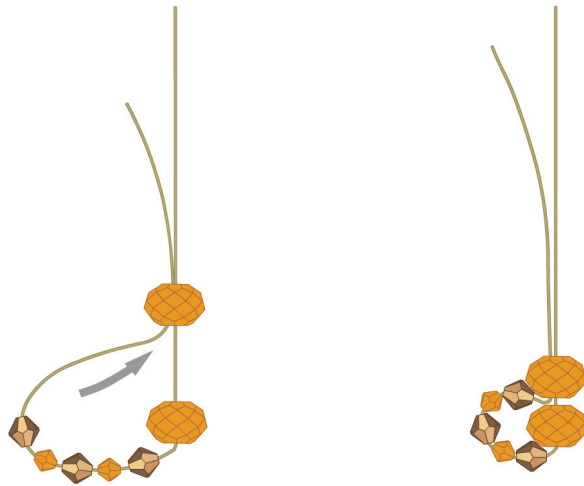


STEP 16

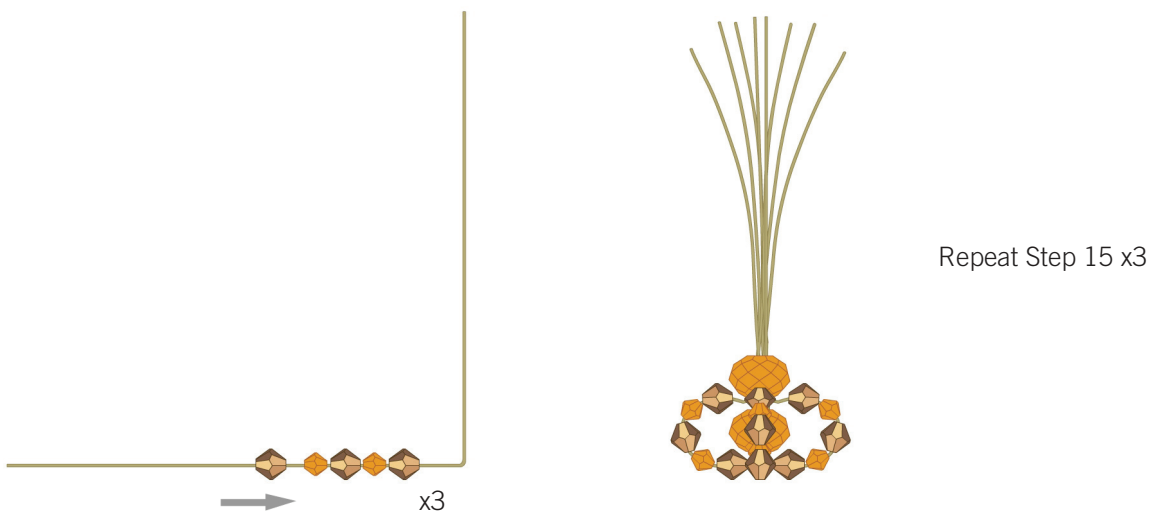


STEP 17

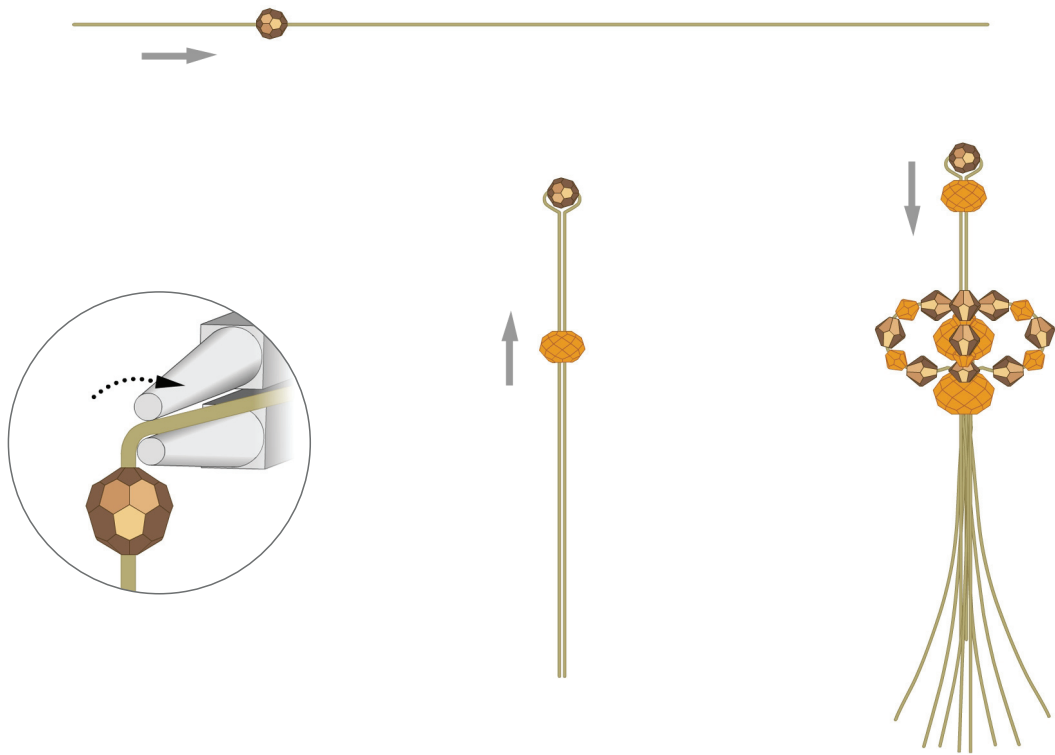

STEP 18

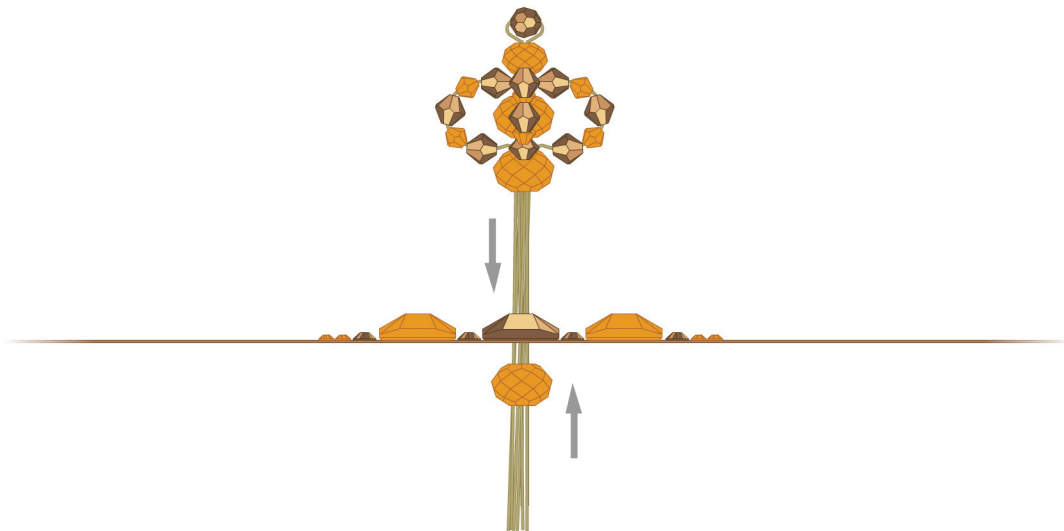



STEP 19

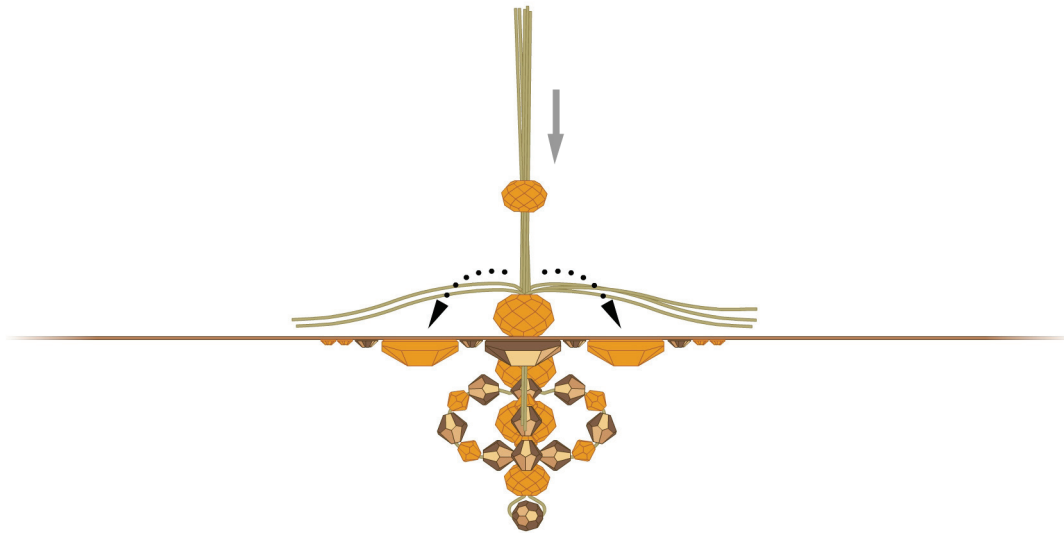

STEP 20



STEP 21

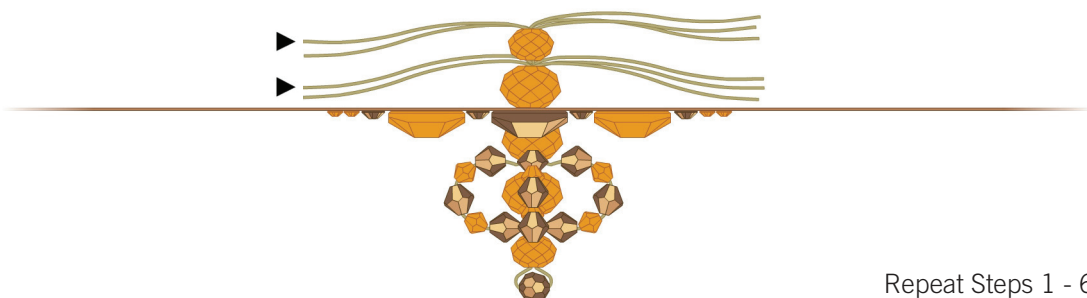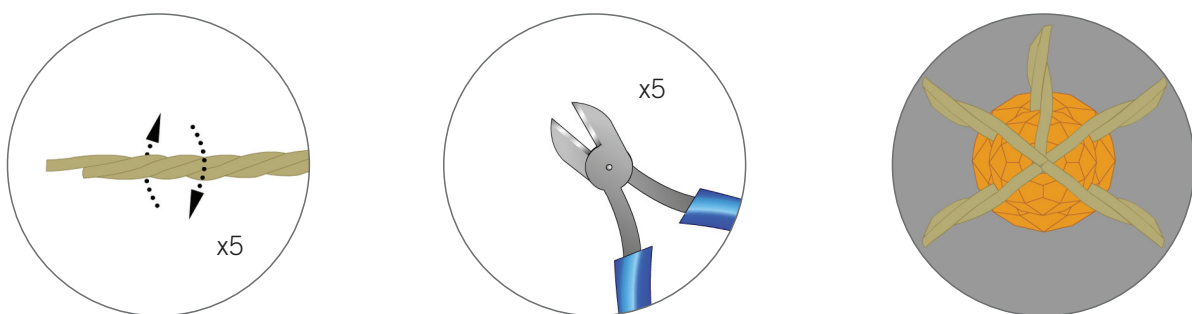

Repeat Steps 1 - 6

CREATE YOUR STYLE with CRYSTALLIZED™ – *Swarovski Elements* Design Elements Design Project Box Pleasures

- Step 1: Mark off center on cardboard. Bring each edge of the card board to the center to make vertical and horizontal creases.
- Step 2: Fold the points of top and bottom flaps over.
- Step 3: Fold the points of the vertical edges over as well.
- Step 4: Make mountain lines in the four places as shown in the illustration
- Step 5: Fold the flap inside as shown in illustration.
- Step 6: Repeat step 5 for the other side of box.
- Step 7: Draw - with ruler and pencil - 8 squares onto the top of the box as shown in the illustration.
- Step 8: Unfold the box.
- Step 9: Apply CRYSTALLIZED™ Crystal- it in 2 and 3 mm in Topaz and Crystal Dorado to the box as shown in the illustration.
- Step 10: Put some glue onto the CRYSTALLIZED™ Flat Backs No Hotfix article 2483 10 mm Topaz and Crystal Dorado and apply them onto the squares that were drawn on the box in step 7.
- Step 11: In the middle of the box punch a hole with a needle.
- Step 12: Apply CRYSTALLIZED™ Crystal- it in 2 and 3 mm in Topaz and Crystal Dorado on the box as shown.
- Step 13: Continue applying CRYSTALLIZED™ Crystal- it in 2 and 3 mm in Topaz and Crystal Dorado on the other sections of the box.
- Step 14: Cut five pieces of 12 cm brass wire with side cutter. Bend the 5 wire pieces rectangular in the middle and alternate the following beads on the wire: CRYSTALLIZED™ Bead article 5301 4 mm Crystal Dorado and CRYSTALLIZED™ Bead article 5301 3 mm Topaz. String 2 CRYSTALLIZED™ Beads, article 5040 8 mm Topaz onto the other side of the wire.
- Step 15: Thread the end of the wire with the 5301 beads up through the second 5040 bead as shown in the illustration.
- Step 16: Slide the following beads onto the horizontal length of 3 of the other bended brass wires alternating the beads as you did in step 14: CRYSTALLIZED™ Bead article 5301 4 mm Crystal Dorado and CRYSTALLIZED™ Bead article 5301 3 mm Topaz. Slide the ends of the wires into the CRYSTALLIZED™ Beads article 5040 from step 14 and repeat step 15 3 times (See illustration).
- Step 17: Take the 5th piece of 12 cm brass wire and slide into the middle one CRYSTALLIZED™ Bead article 5000 4 mm Crystal Dorado and bend both wire ends 90° around the Bead then slide one CRYSTALLIZED™ Bead article 5040 6 mm Topaz onto both ends of the wire. Then go with wire ends through 5040 8 mm Beads from previous steps. (See illustration).
- Step 18: Pass all thread ends through punched hole in the middle of top of the box and slide on one CRYSTALLIZED™ Bead article 5040 8 mm Topaz.
- Step 19: Bend 5 wire ends sideways after last bead (see picture in illustration). Slide a CRYSTALLIZED™ Bead article 5040 6 mm Topaz onto other 5 wire ends.
- Step 20: Bend remaining 5 thread ends down as shown in illustration.
- Step 21: Twist 2 thread ends at a time to secure. Repeat steps 1- 6 to reassemble box.